



Disassembling DualShock 4 Controller

Written By: Mark





TOOLS:

- [iFixit Opening Tools](#) (2)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Controller



- Using the Phillips #00 Screwdriver, remove the four 6.0 mm screws securing the rear cover to the controller.

⚠ Do not forcefully loosen the screws, as it will amount to permanent damage of the threads, making removal impossible.

Step 2



- Beginning with the **left shoulder**:
 - Pinch the left shoulder of the controller to introduce an opening.
 - Wedge a plastic opening tool into the opening and slide it up towards the joystick.
 - Pull down on the plier to crack open the casing.
- Repeat these steps for the **right shoulder**.

Step 3



- Wedge a plastic opening tool into the case-splittings and pull down to crack open the casing near the following buttons:
 - **Share** button
 - **Options** button
- Split the plastic covers of the controller apart, taking note that they will still be attached by circuit board ribbons.
- ⓘ Three small pieces are often released from the framework. To prevent loss, maintain a controlled work field.
 - 2 Trigger Springs
 - 1 Grey Reset Button Extension

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-24 09:28:52 AM.